



**HI-204S**  
**Mini-DIN**  
**GPS Receiver**

**User Manual**



## **General description of what GPS is and how it works.**

GPS (Global Positioning System) is the only system today able to show you your exact position on the Earth anytime, in any weather, anywhere. GPS satellites, 24 in all, orbit at 11,000 nautical miles above the Earth. They are continuously monitored by ground stations located worldwide. The satellites transmit signals that can be detected by anyone with a GPS receiver. Using the receiver, you can determine your location with great precision.

The satellites are positioned so that we can receive signals from six of them nearly 100 percent of the time at any point on Earth. You need that many signals to get the best position information. Satellites are equipped with very precise clocks that keep accurate time to within three nanoseconds- that's 0.000000003, or three billionths of a second. This precision timing is important because the receiver must determine exactly how long it takes for signals to travel from each GPS satellite. The receiver uses this information to calculate its position.

Although GPS was designed for military use, many thousands of civilians make use of it. The satellites actually broadcast two signals, one is only for military use, and one can be used by both military and civilians. Since GPS is passive (you only need to receive the signal), there are no restrictions on who can use the signal available to civilians.

GPS technology can be used in a variety of fields besides providing navigation for vehicles on the sea, in the air and on the ground. GPS applications also include keeping track of where a fleet of trucks, trains, ships or planes are and how fast they are moving; directing emergency vehicles to the scene of an accident; mapping where a city's assets are located; and providing precise timing for endeavors that require large-scale coordination.

## GLOBAL POSITIONING SYSTEM

# HI-204S GPS RECEIVER

### Pin Assignment

Connectors



#### PS/2 Connector

Color	Function	CN1
Green	TX	5
White	RX	4
Red	VCC	2
Black	GND	1


① Min Din: 6 pin male connector

② Wire:  $3.6 \pm 0.1\text{mm}$



### Pocket PC

HI-204S PS/II GPS receiver Can Connecting to a female PS/II Connector. One end from the female Connector is +12V car charger (charging PDA and GPS receiver simultaneously) the other end form the female PS/II connector is the PDA connector for connecting your PDA.

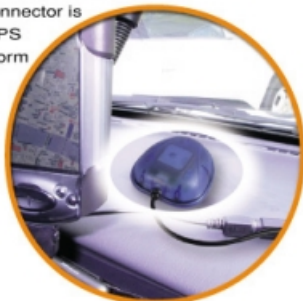

#### For notebook PC use:

HI-204S PS/II can also connect with a PS/II to DB9 PS-232 serial cable or USB connector.

## 1. HI-204S Series Introductions



HI-204S is a GPS receiver with PS/II mini-DIN interfaces and built-in active antenna for high sensitivity to tracking signal. HI-204S is well suited to system integration and users who use any kinds of mobile devices, such as, PDA, notebook PC, Tablet PC, etc. It satisfies a wide variety of applications for car navigation, personal navigation or touring devices, tracking and marine navigation purpose. Users can simply plug it into a PDA or other type of handheld PC running with suitable mapping and routing software for navigation.

### 1.1 Standard Package

Before you start up, make sure that your package includes the following items. If any items are missing or damaged, contact your dealer immediately.

- HI-204S GPS Receiver unit
- Suction CUP
- User Manual CD (including User Manual, HaiTest Testing Program, Driver for PCMCIA card slot of Notebook PC)

### Optional Accessories:

- PS/II to PDA connector and car charger
- PS/II to DB9 adapting cable
- PS/II to USB adapting cable



## **SECTION 1 INTRODUCTION**

### **1.1 OVERVIEW**

The HI-204S GPS Receiver is intended for use in a wide range of applications. The receiver simultaneously tracks up to twelve satellites, provides accurate satellite positioning data with fast time-to-first-fix (TTFF) and low power consumption. It is designed for high performance and maximum flexibility in a wide range of applications including mobile asset tracking, in-vehicle automotive guidance, location sensing, telematics and so on. The highly integrated receiver achieves high performance, minimizes board size and power consumption requirements. The HI-204S is designed to withstand harsh operating environments; however, it should be used inside an enclosure as a part of the application product designed by the system integrator.

### **1.2 FEATURES**

The HI-204S GPS receiver offers following features:

- Twelve parallel tracking channels
- Fast TTFF and low power consumption
- Compact design suitable for applications requiring small space
- On-board rechargeable battery sustained real-time clock and memory for fast satellite acquisition during power-up
- High accuracy one-pulse-per-second output
- Supports NMEA-0183 protocol
- Full navigation accuracy achievable with Standard Positioning Service
- Optimized for navigation in urban-canyon environments
- Automatic cold start with no user initialization required



## SECTION 2 RECEIVER OPERATION

Upon power up, after initial self-test has completed, the HI-204S will begin satellite acquisition and tracking process. Under normal open-sky condition, position-fix can be achieved within approximately 45 seconds (within 15 seconds if valid ephemeris data is already collected from recent use). After receiver position has been calculated, valid position, velocity and time information are transmitted through the on board serial interface.

The receiver uses the latest stored position, satellite data, and current RTC time to achieve rapid GPS signal acquisition and fast TTFF. If the receiver is transported over a large distance across the globe, cold-start automatic-locate sequence is invoked. The first position fix may take up to five minutes searching the sky for the GPS signal. The acquisition performance can be improved significantly if the host initializes the receiver with a rough estimate of time and user position.

As soon as GPS signal is acquired and tracked, the HI-204S will transmit valid navigation information through its serial interface. The navigation data contains following information:

- Receiver position in latitude, longitude, and altitude
- Receiver velocity
- Time
- DOP error-magnification factor
- GPS signal tracking status

The HI-204S will perform 3D navigation when four or more satellites are tracked. When three or fewer satellites are tracked, altitude-hold is enabled using the last computed altitude and 2D navigation mode is entered.

With signal blockage or rising and setting of the satellites, where a change in satellite constellation used for position fix occurred, large position error may result. The HI-204S incorporates a proprietary algorithm to compensate the effect of satellite constellation change, and maintains an accurate smooth estimate of the receiver position, velocity, and heading.

## 2.1 RECEIVER SPECIFICATIONS


FEATURES	DESCRIPTIONS
General	L1 frequency, C/A code, 12-channel
Sensitivity	-165 dBW minimum
Update Rate	1Hz
Accuracy	Position: 25m CEP without S/A Velocity : 0.1/sec without S/A
Acquisition	Cold start: < 48sec (typical) Warm start: < 38sec (typical) Hot start: < 8sec
Reacquisition	<100 msec
Dynamics	Altitude: -1000m to 18000m Velocity: 500m/sec Acceleration: < 4G
Operation Temperature	-20°C to +75°C
Storage Temperature	-55°C to +90°C
Operating Humidity	5% to 95%
Primary Power	+3.8V ~ 8V DC
Current Consumption	80mA @ 3.3V, Trickle power: 27mA
Serial Interface	RS-232
Protocol	4800/9600 baud, 8-None-1 NMEA-0183 v2.20 @ 4800/9600 baud, 8-None-1
Datum	219 standard datum, default WGS-84
Antenna	On-Board Patch Antenna
NMEA Message	GGA, GLL, GSA, GSV, RMC, and VTG
Dimension	69mm x 73mm x 20mm (W x L x H)

## 2.2 LED INDICATOR

LED off	Receiver Switch Off
LED flashing	Signal Searching
LED on	3D Position Fixed


## SECTION 3 HARDWARE INTERFACE

### 3.1 MECHANICAL DIMENSIONS

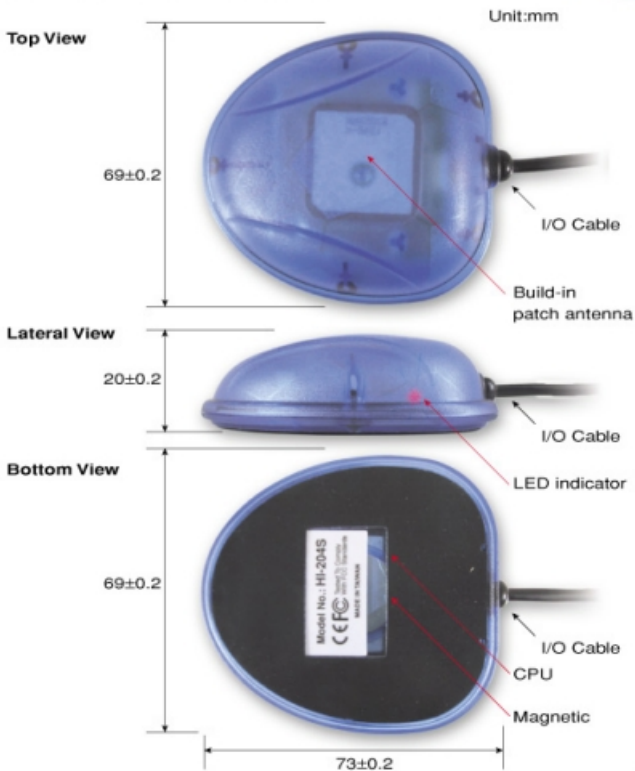




### 3.2 RF MODULE HARDWARE INTERFACE

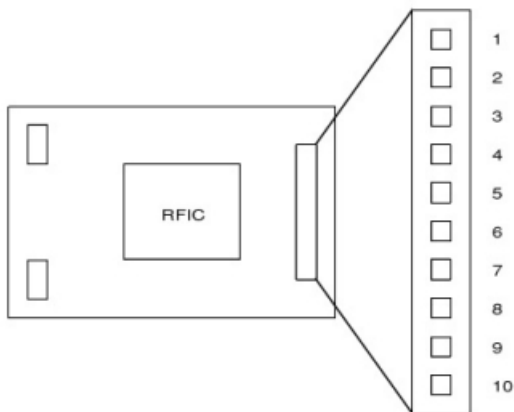

Pin	Description
1	NC
2	NC
3	Vcc Input : 3.3V
4	CTRL : Input signal for RF module power-saving control
5	GND : Power and signal ground
6	REF Out : 16.367MHz reference output
7	GND : Power and signal ground
8	IF Out : 4.092MHz IF signal output
9	NC
10	NC



### 3.3 BASEBAND HARDWARE INTERFACE

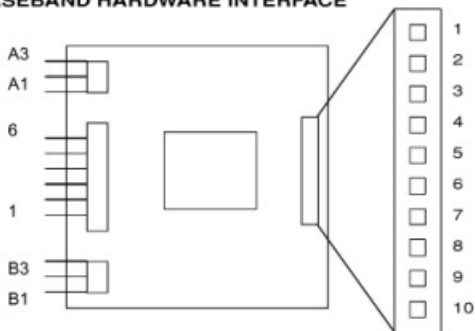

The 10 pin-connector is the same as the RF connector.

A1 : GND, Ground

A2 : 1PPS Valid Signal (1:Valid, 0:Invalid)

A3 : 1PPS

B1 : TX, Serial port output (GPS navigation output)

B2 : RX, Serial port input

B3 : Vcc, Power supply input, 3.8V ~ 8.0V DC unregulated

The following is a functional description of the pins on the 6-pin interface connector.

Pin 1. TX, Serial port output (GPS navigation output)

Pin 2. RX, Serial port input

Pin 3: Vcc, Power supply input, 3.8V ~ 8.0V DC unregulated

Pin 4: GND,Ground

Pin 5: 1PPS Valid Signal (1:Valid, 0:Invalid)

Pin 6: 1PPS

### 3.4 ONE-PULSE-PER-SECOND (1PPS) OUTPUT

The one-pulse-per-second output is provided for applications requiring precise timing measurements. The output pulse is 1usec in duration. Rising edge of the output pulse is accurate to  $\pm 1$ usec with respect to the start of each GPS second. Accuracy of the one-pulse-per-second output is maintained only when the GPS receiver has valid position fix.

The 1PPS output is always generated when the GPS receiver is powered-on. Proper adjustment of the 1PPS output to align with the GPS second requires calculation of the receiver clock offset and clock drift-rate as part of the position-velocity-time (PVT) solution. When enough satellite signals are received to generate valid position fixes, the 1PPS output is adjusted to align with the GPS second in several seconds. When the 1PPS output is brought in sync with the GPS second, the 1PPS Valid Signal on the I/O pin becomes active (HIGH); when the 1PPS output is not yet in sync with the GPS second, the 1PPS Valid Signal remains inactive (LOW).

As long as enough satellite signals are received to generate valid position fixes, the 1PPS output remains synchronized to the GPS second, and the 1PPS Valid Signal remains active. If signal blockage prevents the receiver from generating valid position fix, the 1PPS output will drift away from the GPS second and the 1PPS Valid Signal will become inactive. Upon re-acquiring enough satellites to generate consecutive valid position fixes, the 1PPS Valid Signal will become active again, signaling that the 1PPS output is again synchronized with the GPS second.

For best stable operation of the 1PPS signal, it is to be operated in static environment having clear view of the sky.



## SECTION 4 SOFTWARE INTERFACE

This section describes the details of the serial port commands through which the HI-204S is controlled and monitored. The serial port commands allow users to set the receiver parameters, configure output message type, and retrieve status information. The baud rate and protocol of the host COM port must match the baud rate and protocol of the GPS receiver serial port for commands and data to be successfully transmitted and received. The default receiver protocol is 4800baud, 8 data bits, 1 stop bit, and none parity.

### 4.1 NMEA OUTPUT MESSAGE SPECIFICATION

The HI-204S supports NMEA-0183 output format as defined by the National Marine Electronics Association (<http://www.nmea.org>). The currently supported NMEA messages for GPS applications are:

<b>GGA</b>	Global Positioning System Fix Data
<b>GLL</b>	Geographic Position Latitude / Longitude
<b>GSA</b>	GNSS DOP and Active Satellites
<b>GSV</b>	GNSS Satellites in View
<b>RMC</b>	Recommended Minimum Specific GNSS Data
<b>VTG</b>	Course Over Ground and Ground Speed

#### 4.1.1 NMEA Checksum Calculation

The optional NMEA checksum can be enabled or disabled when setting up the NMEA protocol. The checksum consists of a "" and two hexadecimal digits derived by exclusive-OR of all the characters between, but not including, the "\$" and "" characters.

## APPENDIX B DEFAULT VALUES

The product has the following factory preset default values:

Datum:	000 (WGS-84)
NMEA Enable Switch:	GGA ON GLL OFF GSA ON GSV ON RMC ON VTG OFF Checksum ON
Baud Rate:	4800 Baud
Elevation Mask:	5 degrees
DOP Mask:	DOP Select: Auto GDOP: 20 PDOP: 15 HDOP: 8
Receiver Operating Mode:	Normal Mode (without 1PPS)

Commands can be issued to the HI-204S to change the settings of the receiver. The new settings will remain effective on next power-on as long as the on-board rechargeable backup battery is not discharged. After the backup battery is discharged, factory preset default settings will be used.

## TROUBLESHOOTING

Problem	Reasons	Solutions
No Position output but timer is counting	Weak or no GPS signal can be received at the place of HI-204S unit	Connect an external antenna to HI-204S and place the antenna under a open space, then, press 'Reset'
	At outdoor space but GPS signal is blocked by building or car roof	To try again, go to outdoor and press 'Reset' or connect external antenna on the side of HI-204S to improve the poor GPS signal
Execute Fail	Wrong CPU type	PocketPC support multiple types of CPU. Make sure you download the correct testing (or mapping software). You can use the PDA smart menu's 'setting' function to see whether the CPU type is correct or not.
Can't open COM port	The PS/II connector did not insert correctly or some other application is the COM port	Insert all HI-204S connector firmly or close all other application that occupied the COM port
Can not find HI-204S	Poor connection	Check HI-204S if insert firmly
No signal	No action for few minutes may cause PocketPC into the power saving mode. It could close the COM port at the same time.	Close all applications and execute it again to re-open the COM port
	Weak or no GPS signal when using HI-204S indoor or inside the car.	Put HI-204S to an open space or car roof, then, press the Reset button



**WATERPROOF**  
**GPS Receiver**

